

Quick Start Guide

To begin using your ScanXL™ software:

1. Install ScanXL™ software on your computer:


- Insert the software into your CD-ROM drive to automatically launch the installer
 - If the software does not launch automatically:
 1. Click **Start→Run**
 2. Type D:\setup.exe
 - Follow the prompts to install the software
- Note:** You can also download the latest version of ScanXL™ from PalmerPeformance.com




2. Launch ScanXL software:

- Click **Start→Programs→ScanXL-ElmScan→ScanXL** to launch the software.
- Enter your registration information when prompted.

3. Select your vehicle:

- Before you can connect to a vehicle, you must create a profile in the **Vehicle Manager**. You will need to do this every time you connect to a different vehicle.
- Open the Vehicle Manager by clicking the  button on the toolbar. Click the **New Vehicle** button and enter in your information by using the drop-down boxes and click OK.
- Highlight your vehicle in the Vehicle Manager and click the **Select Vehicle** button. Note that every time you connect to a different vehicle, you need to make sure you select the correct profile for that vehicle in the Vehicle Manager.

4. Connect to your vehicle:

- Securely connect your scan tool with your computer and vehicle. See the scan tool's Quick Start Guide for more information.
- Using the toolbar at the top of the ScanXL™ application, click the connect button:  After the software has connected successfully, a window will pop up confirming the connection. Also, in the status bar at the bottom of the application, the scan tool and vehicle indicator boxes will turn green.

5. Perform vehicle diagnostics:

- Go to the **Diagnostics** tab to read trouble codes, view live vehicle data, view freeze frame (history) data or examine the continuous or non-continuous vehicle monitors.
- Go to the **Settings** tab to view or modify connection or PID settings
- To start or stop recording live vehicle sensor data, use the control panel at the bottom.

Technical support:

If you encounter any problems, contact customer support at:
support@palmerperformance.com

Or, you can visit the user forum at this address:

<http://www.palmerperformance.com/forum/index.php>

